


# ROTEL®

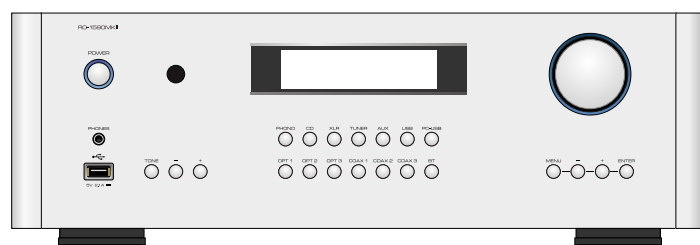

## RC-1590MKII

Stereo Control Amplifier

Amplificateur de Contrôle Stéréo

Stereo-Vorverstärker

Preamplificador Estereofónico

Stereo-regelverstärker

Preamplificatore Stereo

Stereokontrollförstärkare

Предварительный стерео усилитель

**Owner's Manual**

**Manuel de l'utilisateur**

**Bedienungsanleitung**

**Manual de Instrucciones**

**Gebbruikershandleiding**

**Manuale di istruzioni**

**Instruktionsbok**

**Инструкция пользователя**

## Important Safety Instructions

### Notice

The RS232 connection should be handled by authorized persons only.

**WARNING:** There are no user serviceable parts inside. Refer all servicing to qualified service personnel.

**WARNING:** To reduce the risk of fire or electric shock, do not expose the unit to moisture or water. Do not expose the unit to dripping or splashing. Do not place objects filled with liquids, such as vases, on the unit. Do not allow foreign objects to get into the enclosure. If the unit is exposed to moisture, or a foreign object gets into the enclosure, immediately disconnect the power cord from the wall. Take the unit to a qualified service person for inspection and necessary repairs.

Read these instructions.

Keep these instructions.

Heed all warnings.

Follow all instructions.

Do not use this apparatus near water.

Clean only with dry cloth.

Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other.

A grounding type plug has two blades and a third grounding prong.

The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

Only use attachments/accessories specified by the manufacturer.

Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.

When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Unplug this apparatus during lightning storms or when unused for long periods of time.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.


The apparatus should be used in non tropical climate.

The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

No naked flame sources, such as lighted candles, should be placed on the apparatus.

Touching uninsulated terminals or wiring may result in an unpleasant sensation.

You must allow a minimum 10 cm or 4 inches of unobstructed clearance around the unit.

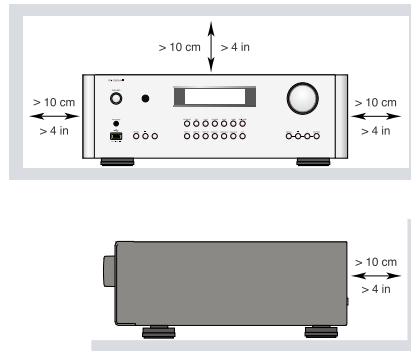

**WARNING:** The rear panel power cord connector is the mains power disconnect device. The device must be located in an open area that allows access to the cord connector.



The unit must be connected to a power supply only of the type and voltage specified on the rear panel. (USA: 120 V/60Hz, EC: 230V/50Hz)

Connect the component to the power outlet only with the supplied power supply cable or an exact equivalent. Do not modify the supplied cable. Do not use extension cords.

The mains plug is the disconnect of the unit. In order to completely disconnect the unit from the supply mains, remove the main plug from the unit and the AC power outlet. This is the only way to completely remove mains power from the unit.

The batteries in the remote control should not be exposed to excessive temperature such as sunshine, fire or other heat sources. Batteries should be recycled or disposed as per state and local guidelines.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following to conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

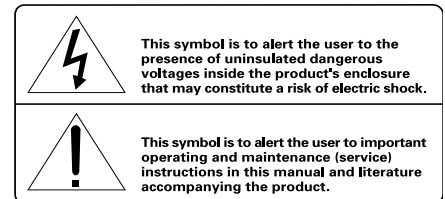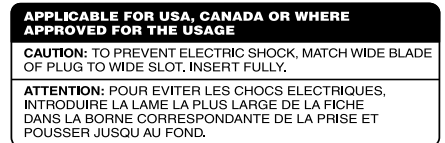

Rotel products are designed to comply with international directives on the Restriction of Hazardous Substances (RoHS) in electrical and electronic equipment and the disposal of Waste Electrical and Electronic Equipment (WEEE). The crossed wheeled bin symbol indicates compliance and that the products must be appropriately recycled or processed in accordance with these directives.



 This symbol means that this unit is double insulated. An earth connection is not required.



### Pin Assignments

Balanced Audio (3 pole XLR):  
Pin 1: Ground / Screen  
Pin 2: In phase / +ve / Hot  
Pin 3: Out of phase / -ve / Cold



Figure 1: Controls and Connections  
 Commandes et Branchements  
 Bedienelemente und Anschlüsse  
 Controles y Conexiones

Bedieningselementen en aansluitingen  
 Controlli e connessioni  
 Kontroller och anslutningar  
 Органы управления и разъемы

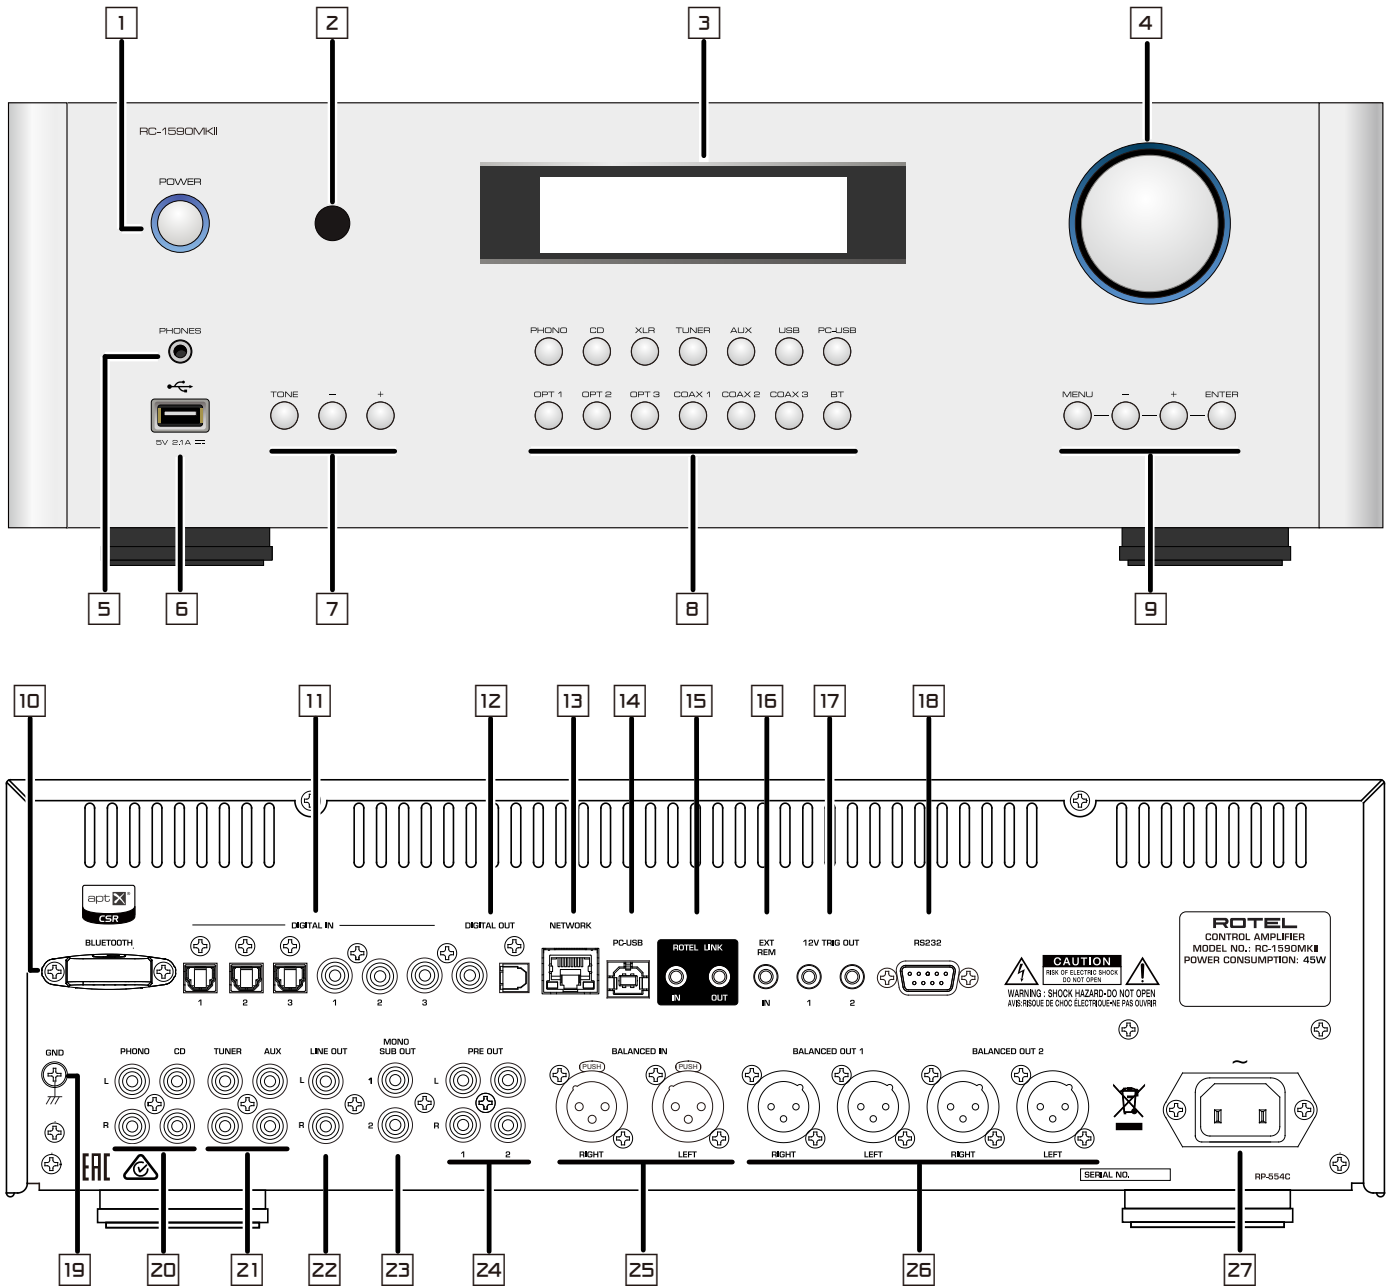


Figure 2: RR-AX100 Remote Control  
 Télécommande infrarouge RR-AX100  
 Fernbedienung RR-AX100  
 Mando a Distancia RR-AX100

Afstandsbediening RR-AX100  
 Telecomando RR-AX100  
 RR-AX100 fjärrkontroll  
 Пульт ДУ RR-AX100

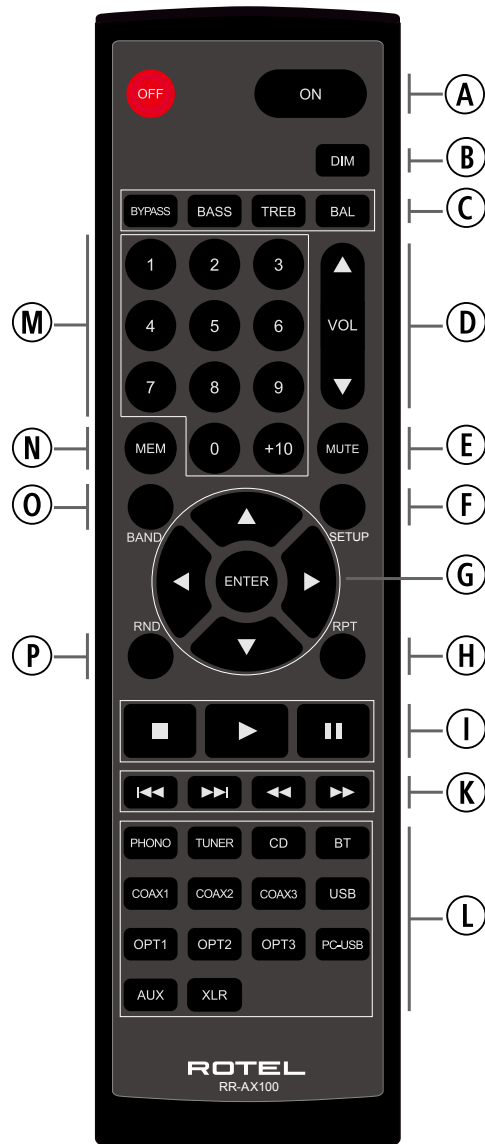


Figure 3: Analog Input and Output Connections  
 Branchements des entrées et sorties analogiques  
 Analoge Ein- und Ausgangsanschlüsse  
 Entradas y Salidas Analógicas

Analoge ingangen en uitgangen  
 Collegamenti ingressi ed uscite analogici  
 Anslutningar för analoga in- och utgångar  
 Аналоговые входы и выходы



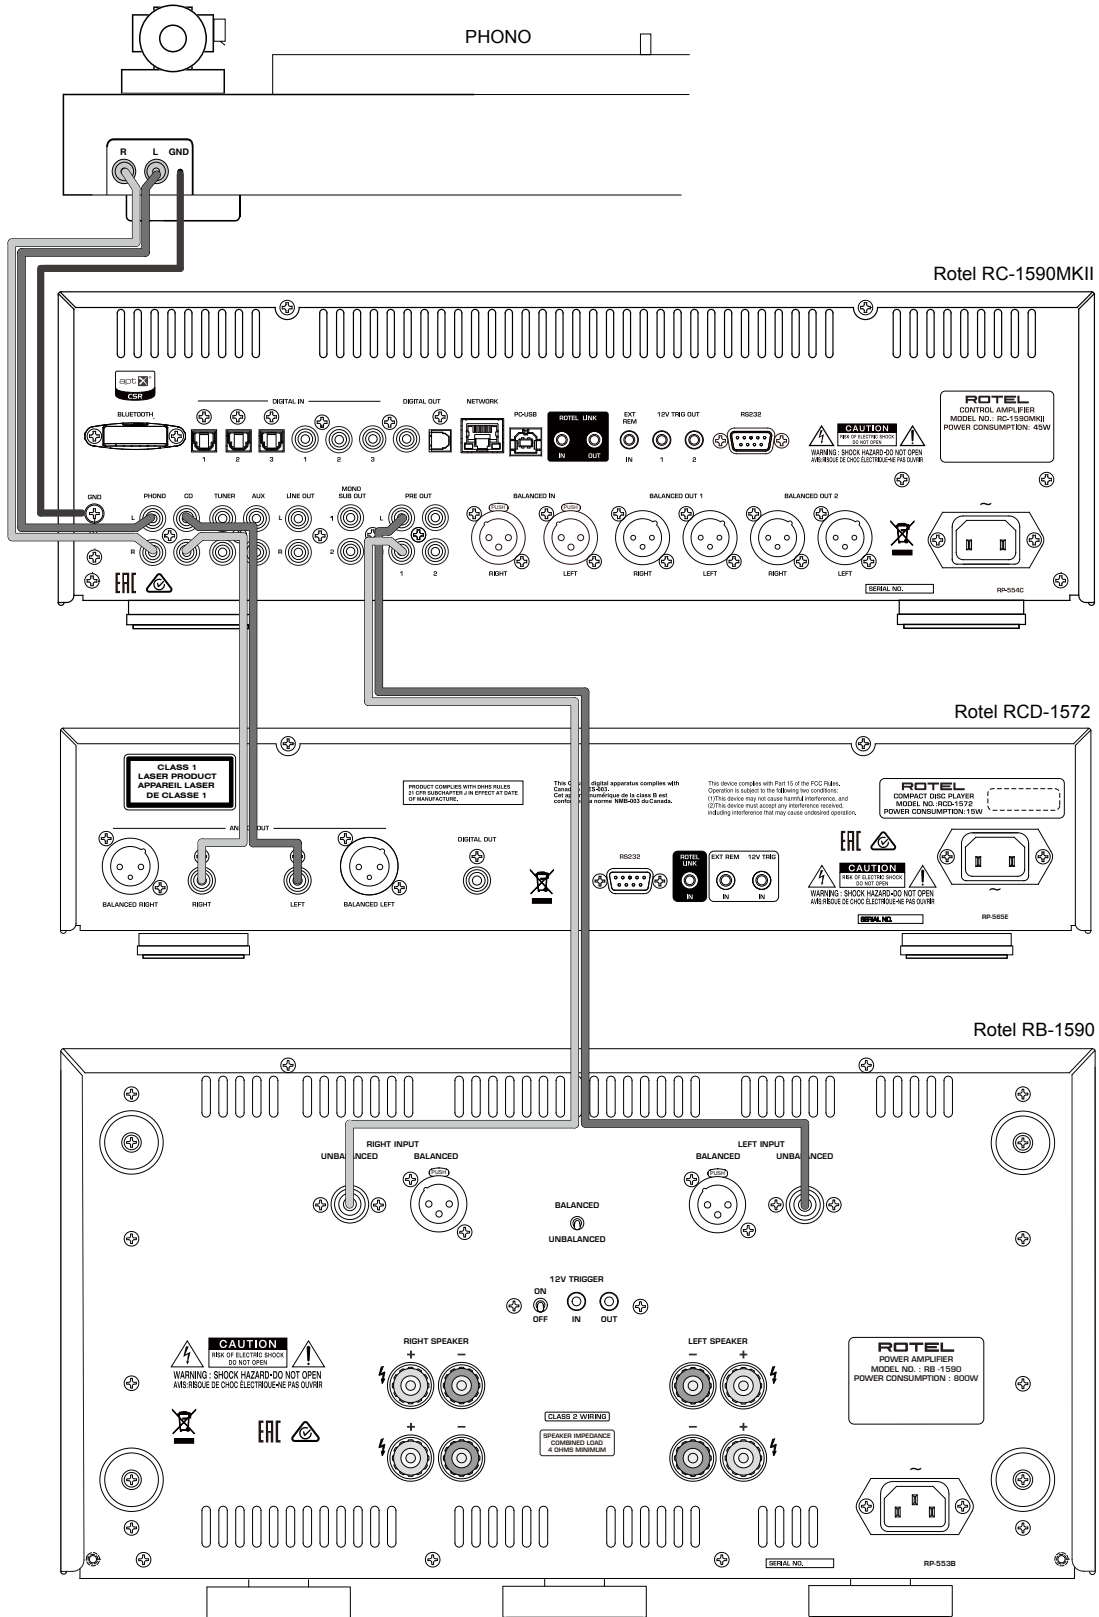


Figure 4: Balanced (XLR) Input and Output Connections  
 Branchements des entrées et sorties symétriques (XLR)  
 Collegamenti ingressi ed uscite bilanciati (XLR)  
 Symmetrische Ein- und Ausgangsanschlüsse (XLR)  
 Entradas y Salidas Balanceadas (XLR)

Gebalanceerde ingangen (XLR) en uitgangen  
 Collegamenti ingressi ed uscite bilanciati (XLR)  
 Balanserade in- och utgångar (XLR)  
 Балансные (XLR) входы и выходы



**Figure 5: Digital Inputs and 12V Trigger Output**  
 Entrées numériques et Branchements des sorties trigger 12 V  
 Digitaleingänge und 12V TRIG-Ausgang  
 Entradas Digitales y Salida para Señal de Disparo de 12V  
 Digitale ingangen en 12V trigger-uitgang  
 Collegamenti ingressi digitali e segnali Trigger 12 V  
 Anslutningar för digitala ingångar och 12-volts styrsignaler  
 Цифровые входы и 12-В триггерный выход

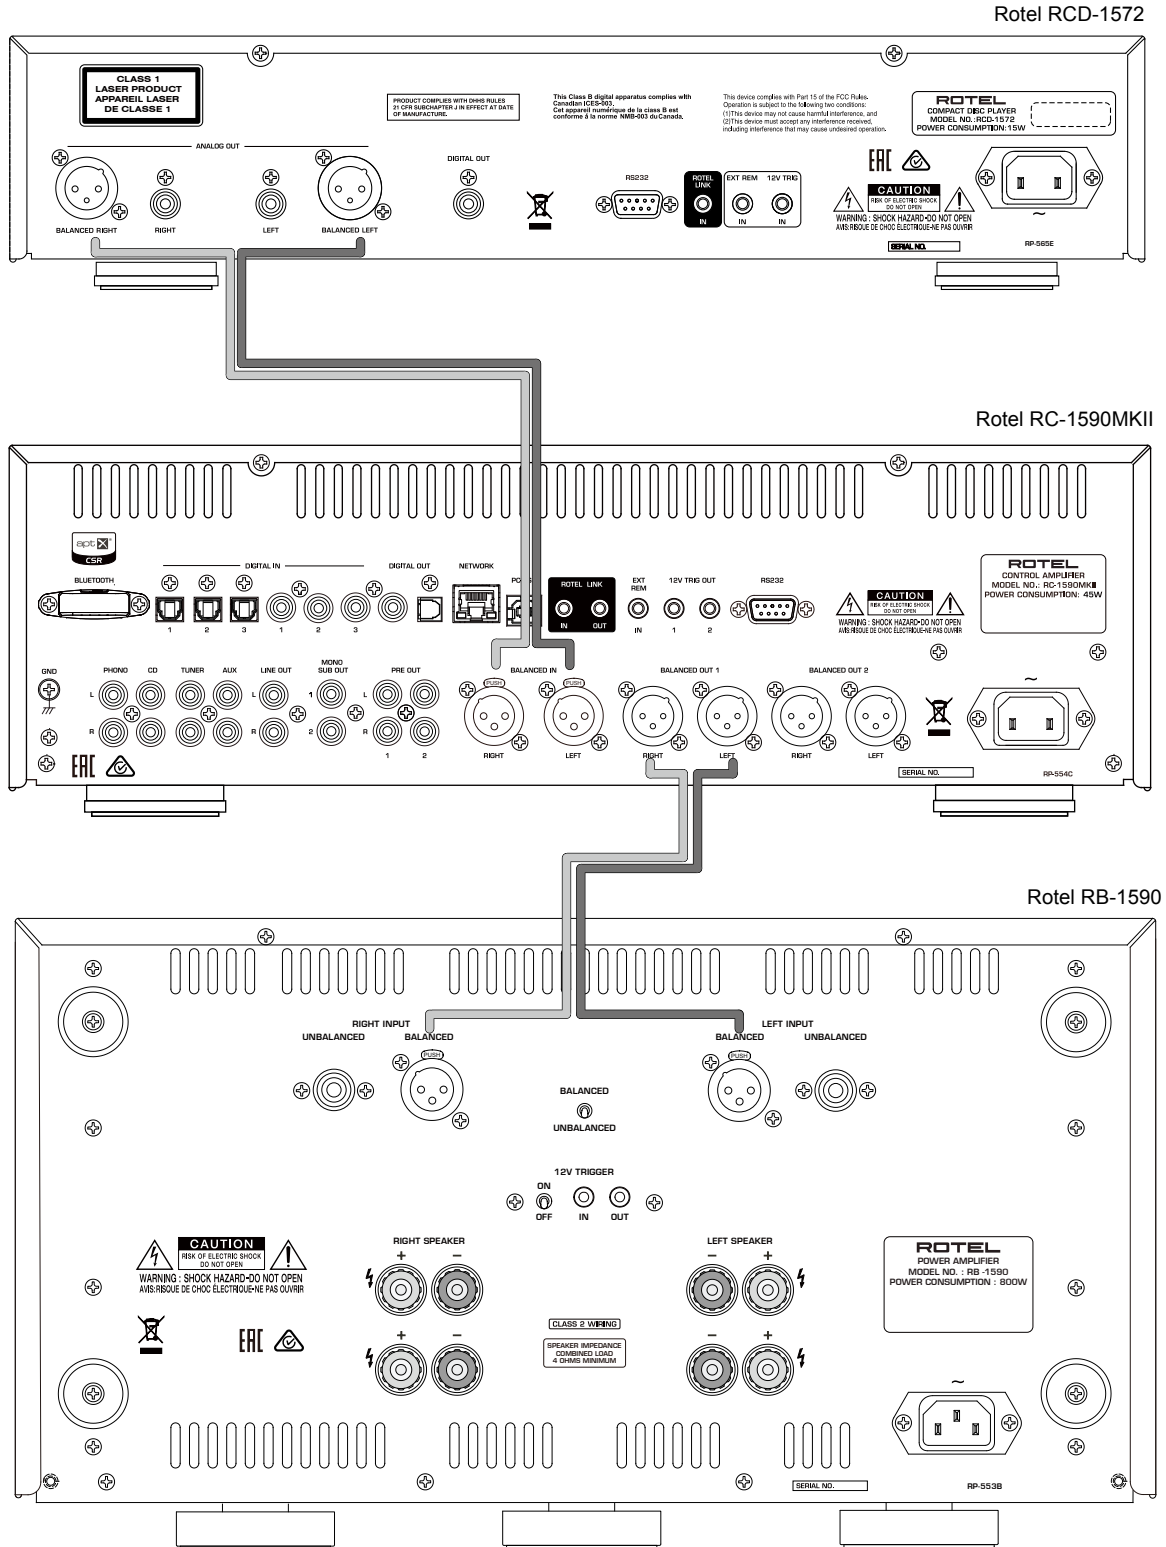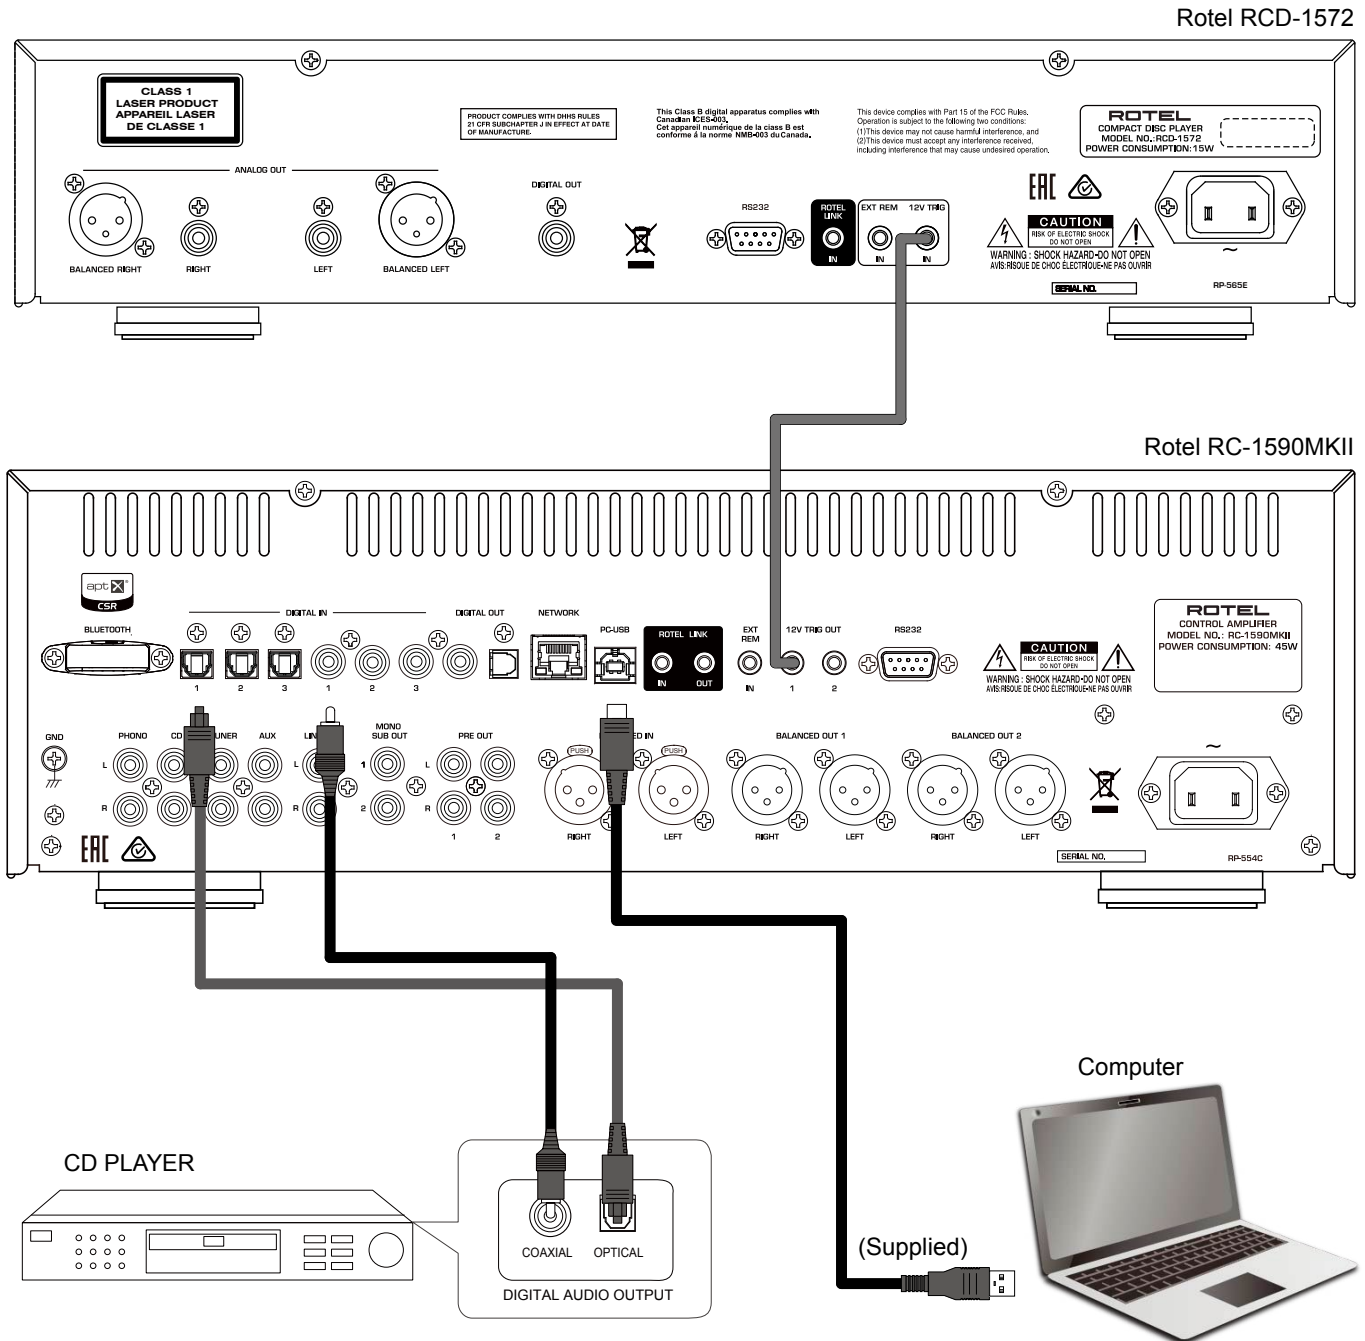

## Important Notes

### When making connections be sure to:

- ✓ Turn off **all** the components in the system **before** hooking up **any** components, including loudspeakers.
- ✓ Turn off **all** components in the system **before** changing **any** of the connections to the system.

### It is also recommended that you:

- ✓ Turn the volume control of the amplifier all the way down **before** the amplifier is turned **on or off**.

## Remarques importantes

### Pendant les branchements, assurez-vous que :

- ✓ **Tous** les maillons sont éteints **avant** leur branchement, **quels qu'ils soient**, y compris les enceintes acoustiques.
- ✓ Éteignez **tous** les maillons **avant** de modifier **quoi que ce soit** au niveau de leurs branchements, quels qu'ils soient.

### Il est également recommandé de :

- ✓ Toujours baissez le niveau sonore via le contrôle de volume, **avant d'allumer ou d'éteindre** l'amplificateur.

## Wichtige Hinweise

### Achten Sie beim Herstellen der Verbindungen auf Folgendes:

- ✓ Schalten Sie **alle** Komponenten im System ab, **bevor** Sie Geräte (einschließlich Lautsprecher) anschließen.
- ✓ Schalten Sie **alle** Komponenten im System ab, **bevor** Sie Anschlüsse im System verändern.

### Ferner empfehlen wir, dass

- ✓ Sie die Lautstärke herunterdrehen, **bevor** Sie die Endstufe **ein-** oder **abschalten**.

## Notas Importantes

### Cuando realice las conexiones, asegúrese de que:

- ✓ Desactiva **todos** los componentes del equipo, cajas acústicas incluidas, **antes** de conectar **cualquier nuevo componente** en el mismo.
- ✓ Desactiva **todos** los componentes del equipo **antes** de cambiar **cualquier conexión del mismo**.

### También le recomendamos que:

- ✓ Reduzca el nivel de volumen de su amplificador a cero **antes** de **activarlo o desactivarlo**.

## Héél belangrijk

### Bij het maken van de verbindingen:

- ✓ Zorg dat niet alleen de RC-1590MKII, maar de **gehele** installatie uitstaat, als nog niet **alle** verbindingen gemaakt zijn.
- ✓ Zorg dat niet alleen de RC-1590MKII, maar de **gehele** installatie ook uitstaat, **als** u verbindingen gaat **wijzigen**.

### Wij raden u ook aan om

- ✓ de volumeregelaar van de voorversterker geheel dicht te draaien (volkomen naar links) **wanneer** u uw eindversterker **aan- of uitzet**.

## Note importanti

### Quando effettuate i collegamenti assicuratevi di:

- ✓ Spegnerne **tutti** i componenti del sistema **prima** di collegare **qualsiasi** componente, inclusi i diffusori.
- ✓ Spegnerne **tutti** i componenti del sistema **prima** di modificare **qualsiasi** connessione nel sistema.

### Vi raccomandiamo inoltre di:

- ✓ Portare il volume a zero **prima** di **accendere o spegnere** l'amplificatore.

## Viktigt

### Tänk på följande när du gör anslutningar:

- ✓ Stäng av **alla** komponenter i anläggningen **innan** du ansluter nya komponenter, inklusive högtalare.
- ✓ Stäng av **alla** komponenter i anläggningen **innan** du ändrar någon anslutning **i anläggningen**.

### Vi rekommenderar också följande::

- ✓ Vrid ner volymen på förstärkaren helt och hållet **innan** förstärkaren slås **på eller av**.

## Важные замечания

### Перед подсоединением:

 
 
 

 


 
 

 

 





 
 














- ✓ Выключите **все** компоненты, включая колонки.
- ✓ Выключите **все** компоненты в вашей системе, прежде чем что-то в ней **менять**.

### Рекомендуется также:

      - ✓ Вывести громкость усилителя на **минимум**, перед тем как **включать или выключать** его.



## Contents

<b>Important Safety Instructions</b> .....	<b>2</b>
Figure 1: Controls and Connections	3
Figure 2: RR-AX100 Remote Control	4
Figure 3: Analog Input and Output Connections	5
Figure 4: Balanced (XLR) Input and Output Connections	6
Figure 5: Digital Inputs and 12V Trigger Output	7
Important Notes	8
<b>About Rotel</b> .....	<b>9</b>
<b>Getting Started</b> .....	<b>9</b>
A Few Precautions	10
Placement	10
Cables	10
<b>The RR-AX100 Remote Control</b> .....	<b>10</b>
Remote Control Batteries	10
<b>AC Power and Control</b> .....	<b>10</b>
AC Power Input 	10
POWER Switch and Power Indicator 	10
12V TRIGGER Connection 	10
<b>Input Signal Connections</b> .....	<b>10</b>
Phono Input  and Ground Connection (GND) 	11
Line Level Inputs  	11
Balanced (XLR) Inputs 	11
Digital Inputs 	11
<b>Output Connections</b> .....	<b>11</b>
Digital output 	11
Line Output 	11
MONO SUB Output 	11
Preamp Output 	11
Balanced (XLR) Preamp Output 	11
Headphone Output 	11
<b>Remote Sensor</b> 	<b>11</b>
<b>Display</b> 	<b>11</b>
<b>Front USB Input</b> 	<b>11</b>
<b>APT-X Bluetooth Connection</b> 	<b>12</b>
<b>Audio Controls</b> .....	<b>12</b>
Volume Control    	12
Balance Control 	12
Tone Control Bypass 	12
Bass and Treble Controls  	12
Function Control 	12
<b>Dimmer Control</b> .....	<b>12</b>
Display Dimmer 	12
<b>Rotel Link</b> 	<b>12</b>
<b>EXT REM IN Jack</b> 	<b>12</b>
<b>RS232</b> 	<b>12</b>
<b>PC-USB Input</b> 	<b>13</b>
<b>Network Connection</b> 	<b>13</b>
<b>Setup Menu</b> .....	<b>13</b>
<b>Troubleshooting</b> .....	<b>15</b>
Power Indicator Is Not Illuminated	15
Fuse Replacement	15
No Sound	15
Playable Audio Format	15
<b>Specifications</b> .....	<b>16</b>

## About Rotel

Our story began over 50 years ago. Over the decades, we have received hundreds of awards for our products and satisfied hundreds of thousands of people who take their entertainment seriously - like you!

Rotel was founded by a family whose passionate interest in music led them to manufacture high-fidelity components of uncompromising quality. Through the years, that passion has remained undiminished and the family goal of providing exceptional value for audiophiles and music lovers, regardless of their budget, is shared by all Rotel employees.

Rotel's engineers work as a close team, listening to, and fine tuning, each new product until it reaches their exacting musical standards. They are free to choose components from around the world in order to make that product the best they can. You are likely to find capacitors from the United Kingdom and Germany, semiconductors from Japan or the United States, while toroidal power transformers are manufactured in Rotel's own factory.

We all have concerns about our environment. And, as more and more electronics are produced it is especially important for a manufacturer to do all it can to engineer products that have a minimum impact on the environment.

At Rotel, we are proud to do our part. We have reduced the lead content in our products by using special lead-free ROHS solder and components. Our engineers continually strive to improve power supply efficiency without compromise to quality. When in standby mode Rotel products use minimal power to meet global Standby Power Consumption requirements.

The Rotel factory is also doing their part to help the environment through constant improvements to product assembly methods for a cleaner and greener manufacturing processes.

All of us at Rotel thank you for buying this product. We are sure it will bring you many years of enjoyment.

## Getting Started

Thank you for purchasing the Rotel RC-1590MKII Stereo Control Amplifier. When used in a high-quality music audio system, your Rotel product will provide years of musical enjoyment.

The RC-1590MKII is a full featured, high performance component. All aspects of the design have been optimized to retain the full dynamic range and subtle nuances of your music. The RC-1590MKII has a highly regulated power supply incorporating a Rotel custom-designed toroidal power transformer and custom-made slit foil capacitors. This low impedance power supply has ample power reserves, which enables the RC-1590MKII to easily reproduce the most demanding audio signals. This type of design is more expensive to manufacture, but it is better for the music.

The printed circuit boards (PCB) are designed with Symmetrical Circuit Traces. This ensures that the precise timing of the music is maintained and faithfully recreated. The RC-1590MKII circuitry uses metal film resistors and polystyrene or polypropylene capacitors in important signal paths. All aspects of this design have been examined to ensure the most faithful music reproduction.

The main functions of the RC-1590MKII are easy to install and use. If you have experience with other stereo systems, you shouldn't find anything perplexing. Simply plug in the associated components and enjoy.

## A Few Precautions

---

**WARNING:** To avoid potential damage to your system, turn off ALL the components in the system when connecting or disconnecting the loudspeakers or any associated components. Do not turn the system components back on until you are sure all the connections are correct and secure. Pay particular attention to the speaker wires. There must be no loose strands that could contact the other speaker wires, or the chassis of the amplifier.

---

Please read this manual carefully. In addition to basic installation and operating instructions, it provides valuable information on various RC-1590MKII system configurations as well as general information that will help you get optimum performance from your system. Please contact your authorized Rotel dealer for answers to any questions you might have. In addition, all of us at Rotel welcome your questions and comments.

Save the RC-1590MKII shipping carton and all enclosed packing material for future use. Shipping or moving the RC-1590MKII in anything other than the original packing material may result in severe damage to your amplifier.

If included in the box please fill out and send in the owner's registration card. Also be sure to keep the original sales receipt. It is your best record of the date of purchase, which you will need in the event warranty service is ever required.

## Placement

Like all audio components that handle low-level signals, the RC-1590MKII can be affected by its environment. Avoid placing the RC-1590MKII on top of other components. Also avoid routing audio signal cables near power cords. This will minimize the chance it will pick up hum or interference.

The RC-1590MKII is supplied with an RR-AX100 remote control and must be placed where the infrared signal from the remote can reach the front panel Remote Sensor.

## Cables

Be sure to keep the power cords, digital signal cables and regular audio signal cables in your installation away from each other. This will minimize the chance of the regular audio signal cables picking up noise or interference from the power cords or digital cables. Using only high quality, shielded cables will also help to prevent noise or interference from degrading the sound quality of your system. If you have any questions see your authorized Rotel dealer for advice about the best cable to use with your system.

## The RR-AX100 Remote Control

Some functions can be done with either the front panel controls, or the supplied RR-AX100 remote control. When these operations are described, the square call out numbers refer to the main unit, while the encircled letters refer to the remote control.

### Remote Control Batteries

Two AA size batteries (supplied) must be installed before the remote control can be used. To install the batteries, remove the cover on the back of the RR-AX100. Install the batteries as shown in the illustration in the battery

well. Test the control for proper operation, then replace the cover. When the batteries become weak the remote control won't operate the RC-1590MKII consistently. Installing fresh batteries should eliminate the problem.

## AC Power and Control

### AC Power Input 27

Your RC-1590MKII is configured at the factory for the proper AC line voltage in the country where you purchased it (either 120 volts AC or 230 volts AC with a line frequency of either 50 Hz or 60 Hz). The AC line configuration is noted on a decal on the back panel.

---

**NOTE:** Should you move your unit to another country, it may be possible to reconfigure it for use on a different line voltage. Do not attempt to perform this conversion yourself. Opening the enclosure of the unit exposes you to dangerous voltages. Consult a qualified service person or the Rotel factory service department for information.

---



---

**NOTE:** Some products are intended for sale in more than one country and as such are supplied with more than one AC cord. Please only use the one appropriate for your country/region.

---

The RC-1590MKII should be plugged directly into a 2-pin polarized wall outlet. Do not use an extension cord. A heavy duty multi-tap power outlet strip may be used if it (and the wall outlet) is rated to handle the current demanded by the RC-1590MKII and all the other components connected to it.

If you are going to be away from home for an extended period of time such as a month long vacation, it is a sensible precaution to unplug the RC-1590MKII (as well as other audio and video components) while you are away.

### POWER Switch and Power Indicator 1

Press the front panel Power Switch button to turn the unit on. The Power Indicator light is illuminated when the unit is on. Press the Power Switch button again to turn the unit off.

When the power switch is in the ON position, the remote control ON and OFF buttons may be used to activate the RC-1590MKII. In Standby mode the power LED remains illuminated, but the display is turned OFF.

---

**NOTE:** Place the self adhesive ring over the light surrounding the power switch if the blue light is too bright.

---

### 12V TRIGGER Connection 17

See Figure 5

Some audio components can be turned on automatically when they receive a 12V turn on "signal". The two 12V Trigger Outputs on the RC-1590MKII provide the required signal. Connect compatible components to the RC-1590MKII with a conventional 3.5mm mini mono plug cable. When the RC-1590MKII is in standby mode, the trigger signal is disabled, so the components controlled by it will be turned off.

## Input Signal Connections

---

**NOTE:** To prevent loud noises that neither you nor your speakers will appreciate, make sure the system is turned off when you make any signal connections.

---

## Phono Input <sup>[20]</sup> and Ground Connection (GND) <sup>[19]</sup>

See Figure 3

Plug the cable from the turntable into the appropriate left and right phono inputs. If the turntable has a "ground" wire, connect it to the screw terminal to the left of the Phono inputs. This will help prevent hum and noise.

## Line Level Inputs <sup>[20]</sup> <sup>[21]</sup>

See Figure 3

The CD, Tuner, and Aux inputs of the amplifier are analog "line level" inputs. These inputs are for connecting components such as CD players or other audio playback devices with an analog audio output.

The left and right channels are clearly labeled and should be connected to the corresponding channels of the source component. The Left connectors are white, the Right connectors are red. Use high quality RCA cables for connecting input source components to the RC-1590MKII. Ask your authorized Rotel dealer for advice about cables.

## Balanced (XLR) Inputs <sup>[25]</sup>

See Figure 4

A pair of balanced XLR inputs accept audio signals from CD player, Blu-ray player or other source components with XLR outputs.

**NOTE:** You should choose only one method of analog connection from a source component to RC-1590MKII. Do not connect both the RCA and XLR outputs of a source component to the RC-1590MKII at the same time.

## Digital Inputs <sup>[11]</sup>

See Figure 5

There are three sets of digital inputs labeled 1, 2 and 3, for COAXIAL and OPTICAL respectively. Connect the COAXIAL or OPTICAL PCM outputs of your source component into these sockets. The digital signals will be decoded and played by the RC-1590MKII. The unit is capable of decoding PCM signals up to 24 bit, 192kHz.

## Output Connections

### Digital output <sup>[12]</sup>

If you are using an outboard D/A converter or other digital processor, you will need an unprocessed digital data stream from the RC-1590MKII. Using a standard 75 ohm coax/optical digital cable, connect the RC-1590MKII's digital output to the digital input connector on the outboard D/A converter.

### Line Output <sup>[22]</sup>

The line output connectors can be used to send the analog audio to a separate processor device. These outputs bypass the volume encoder and are full line level output. They should be connected to the analog inputs of the processor. As with other sources be sure to connect the Left and Right channels of each device to the proper channels on the associated components. Use high quality connecting cables to prevent loss of sound quality.

### MONO SUB Output <sup>[23]</sup>

There are 2 connectors for mono subwoofer output to connect to a subwoofer. These mono outputs are summed with both the left and right audio signal. They are parallel outputs allowing 2 subwoofers to be connected to the RC-1590MKII.

## Preamp Output <sup>[24]</sup>

See Figure 3

The RC-1590MKII RCA-type output connectors are compatible with most power amplifiers. As always, select high quality audio interconnect cables. Connect the left and right channel outputs of the RC-1590MKII to the corresponding inputs on the amplifier or other component.

**NOTE:** There are two sets of RCA outputs on the RC-1590MKII. The second set of outputs may be used in custom system configurations to drive a second power amplifier or to supply a signal to a special signal processor.

## Balanced (XLR) Preamp Output <sup>[26]</sup>

See Figure 4

Two pairs of XLR balanced connectors supply an analog output signal from the RC-1590MKII to a power amplifier with XLR balanced input connectors.

**NOTE:** Do not connect both the RCA and XLR to the same amplifier at the same time.

## Headphone Output <sup>[5]</sup>

The headphone output allows you to connect headphones for private listening. This output accepts a standard 3.5mm (1/8") mini stereo headphone connector. Plugging in a set of headphones does not cut off the signal to the preamp outputs. In most instances you should turn off the power amplifier when listening to headphones.

**NOTE:** Because the sensitivity of speakers and headphones can vary widely, always reduce the volume level before connecting or disconnecting headphones.

## Remote Sensor <sup>[2]</sup>

This remote sensor window receives IR commands from the remote control. Please do not block this sensor.

## Display <sup>[3]</sup>

The front panel display shows the source selected, volume level and tone settings. The display can be dimmed using the RC-1590MKII setup menu or the IR remote controller. See the Dimmer Control section of this manual for details.

## Front USB Input <sup>[6]</sup>

The front USB input can be connected to an iPhone, iPad or iPod device providing music playback to the amplifier. To enable audio playback using one of these devices simply plug the device into the front USB and select USB as the desired source. The iPhone, iPad and iPod device will remain active allowing search and play functions.

## APTX Bluetooth Connection 10

The Bluetooth Antenna 10 on the RC-1590MKII's back panel is for wireless streaming via Bluetooth, from your device (i.e. mobile phones). From your mobile device, look for "Rotel Bluetooth" and connect to it. Connection is normally automatic, but if prompted for a password, please press "0000" on your device. The RC-1590MKII's supports both traditional Bluetooth, AAC and APTX Bluetooth audio streaming.

## Audio Controls

### Volume Control 4 D E

Turn the knob clockwise to increase the volume, or counter clockwise to decrease the volume. From the remote control press the volume + or - D button to turn the volume up or down. Press the MUTE E button to completely mute the volume.

### Balance Control 9 C

The Balance Control adjusts the left-to-right balance of the sound output. The factory default is the center position or "0". To change the balance from the front panel, press the MENU 9 button to toggle the front display to BALANCE SETTING mode. Then press the - or + buttons on the front panel to change the value to LEFT or RIGHT. The value can change from L15 to R15.

---

**NOTE:** This setting is saved permanently including after powering off the RC-1590MKII.

---

To make temporary changes not saved after power off, from the remote control press the BAL C button to access the BALANCE setting, then press the left/right G arrow buttons to adjust. When finished, press the ENTER G button to exit the menu.

### Tone Control Bypass 9 C

Bass and Treble Control (Tone Control) circuits are bypassed at factory default to ensure the purest possible sound. The front display will show TONE BYPASS. To turn on the tone control from the front panel, press the MENU 9 button to toggle to the Bypass control then press the - or + buttons on the front panel to turn bypass on or off.

---

**NOTE:** This setting is saved permanently including after powering off the RC-1590MKII.

---

To temporarily change the Tone Control Bypass, press the TONE 7 button on the front panel, then press the - or + button on the front panel to turn the Bypass on or off, or press the BYPASS C button on the remote control.

### Bass and Treble Controls 9 C

Set the Bass or Treble controls from the front panel by pressing the MENU 9 button to toggle to either the Bass or Treble Setting menu. Then press the - or + button on the front panel to adjust the value. The Bass and Treble values range from -10 to +10.

---

**NOTE:** These settings are saved permanently including after powering off the RC-1590MKII.

---

To temporarily change the Bass and Treble settings, press the TONE 7 button on the front panel to toggle to the Bass or Treble Setting, then press the - or + button on the front panel to adjust the value. Or from the remote control, press the BASS or TREBLE C button, then press the left/right G arrow buttons on the remote control.

---

**NOTE:** When Tone Bypass is disabled, Bass and Treble settings can not be changed by the Tone button 7 or the BASS/TREBLE buttons C.

---

A properly setup high-performance audio system produces the most natural sound with little or no adjustment of the tone controls. Use these controls sparingly. Be particularly careful when turning the controls up as this increases the power output in the bass or treble range, increasing the load on the amplifier and speakers.

---

**NOTE:** Setting the Bass and Treble controls do not automatically turn on the tone control. To turn on tone control, refer to previous section Tone Control Bypass.

---



---

**NOTE:** Tone Bypass, Bass, Treble and Balance settings are only saved permanently from within the Menu. Adjustments made using the 7 C buttons are temporary only and not saved after power off.

---

### Function Control 8 L

The Function control selects the input signal source. From the front panel or remote control press the corresponding input button to select the source to listen to.

## Dimmer Control

### Display Dimmer 9 B

To change the brightness of the front display, press the MENU 9 button to toggle to the Display Settings. Then press the - or + buttons on the front panel to change the display brightness.

---

**NOTE:** This setting is saved permanently including after powering off the RC-1590MKII.

---

To temporarily change the display brightness, press the DIM B button on the remote control.

---

**NOTE:** Display Dimmer setting is only saved permanently from within the Menu. Adjustment made using the B button is temporary only and not saved after power off.

---

## Rotel Link 15

Rotel Link is not used for RC-1590MKII.

## EXT REM IN Jack 17

This 3.5mm mini-jack receives command codes from industry-standard infrared receivers via hard-wired connections. This feature could prove useful when the unit is installed in a cabinet and the front-panel sensor is blocked. Consult your authorized Rotel dealer for information on these external repeaters and the proper wiring of a jack to fit the mini-jack receptacle.

## RS232 18

The RC-1590MKII can be controlled via RS232 for integration with automation systems. The RS232 input accepts a standard straight DB-9 Male-to-Female cable.

For additional information on the connections, software, and operating codes for computer control of the RC-1590MKII, contact your authorized Rotel dealer.

## PC-USB Input 14

See Figure 5

Connect this input using the supplied USB cable to the PC-USB socket of your computer.

The RC-1590MKII supports both USB Audio Class 1.0 and USB Audio Class 2.0 modes. Windows computers do not require installation of a driver for USB Audio Class 1.0 and support playback of audio up to 96kHz sampling rates. The Factory Default setting is USB Audio Class 1.0.

To take advantage of USB Audio Class 2.0 audio playback supporting up to 384k Hz sampling rates you will need to install the Windows driver supplied on CD included with the RC-1590MKII. You will also need to switch the RC-1590MKII to USB Audio Class 2.0 playback mode with the following:

- Press MENU on the front panel until "PC-USB AUDIO CLASS" appears on the display.
- Select "2.0" using the "-" button then press "ENTER".
- Power cycle the RC-1590MKII and reboot your PC after changing the USB Audio mode to ensure both units are properly configured.

Many audio playback applications do not support 384k Hz sampling rate. Please confirm your audio player supports 384k Hz audio and you have 384kHz audio files to properly playback this sample rate. Also, you may need to configure the audio driver in your PC to output 384k Hz or your computer may "down sample" to a lower audio sample rate. For more information please refer to your audio player or operating system information.

The RC-1590MKII has been certified as Roon Tested and compatible with Roon software via PC-USB.



Being Roon Tested means that Rotel and Roon have collaborated to ensure you have the best experience using Roon software and the RC-1590MKII together, so you can just enjoy the music.

For the best user experience it is suggested to use USB Audio Class 2.0 when using Roon.

**NOTE:** USB Audio Class 2.0 requires installation of the Windows PC driver on the CD ROM included with the RC-1590MKII.

**NOTE:** MAC computers do not require a driver to support PC-USB 1.0 or 2.0 audio.

**NOTE:** Upon successful installation of the driver, you may need to select the ROTEL audio driver from the audio/speaker setup of your computer.

**NOTE:** Support for MQA and MQA Studio requires USB Audio Class 2.0. Please select USB Audio 2.0 to support MQA.

## Network Connection 13

The RC-1590MKII can be attached to a network using the rear panel NETWORK socket. The NETWORK configurations allow both static and DHCP IP addressing. See the Network Setup section of this manual under Setup Menu for IP address configuration information.

The NETWORK connections allows software updates to be downloaded from the Internet. The Network connection also allows IP control for integration with automation systems.

For additional information on the IP connection please contact your authorized Rotel dealer.

## Setup Menu

You can access the settings menu from the front panel by pressing the MENU 9 button or the SETUP F button on the remote control. You can change the value of the selected option by pressing the +/- button on the front panel or the left/right G arrow buttons on the remote control. Step through the sub-menus by pressing the MENU 9 button on the front panel or SETUP F button on the remote control.

- TONE Control: TONE BYPASS ON/OFF, BASS level and TREBLE levels can be changed to desired settings. Press the ENTER button on the front panel or on the remote control to toggle between the tone setup options. (For more information on Tone Control refer to the Tone Control Bypass, Bass and Treble control sections.)

**NOTE:** These settings are stored permanently even after the RC-1590MKII is powered off.

- BALANCE: Changes left/right balance. (For more information on Balance sections.)

**NOTE:** This setting is stored permanently even after the RC-1590MKII is powered off.

- DIMMER: Dims the display.

**NOTE:** This setting is stored permanently even after the RC-1590MKII is powered off.

- POWER ON MAX VOLUME: This sets the maximum volume level when the unit is turned ON. "45" is the factory default.

**NOTE:** Power On Max Volume settings do not apply to sources configured with Fixed Gain.

- POWER OPTION: Enables the RC-1590MKII to be controlled via the network port when attached to an automation system. The power consumption is higher in Quick Power mode. If network control is not required select the Normal Power mode. "Normal" is the factory default.

Valid settings include: Normal, Quick.



---

**NOTE:** When the POWER OPTION is configured to Quick, the RC-1590MKII will consume additional power in standby mode.

---

**NOTE:** Due to local power consumption regulations the POWER OPTION function is not available in all markets.

---

- **AUTO POWER OFF:** The RC-1590MKII can be configured to automatically power off if unused for a specified period. If no changes are made to the unit within the specified "Auto Power Off" timer the unit will automatically go to STANDBY mode. The Auto Power Off timer will be restarted if changes are made to the volume, source or playback. The default for Auto Power Off is set to 20 MINS.

Valid settings include: 20 MINS (Default), DISABLE, 1 HOUR, 2 HOURS, 5 HOURS, 12 HOURS.

- **FIXED GAIN:** Configures a Fixed Volume level for a specified input. To enable this feature press the +/- buttons on the front panel to select the desired fixed volume level for Aux, FUSB, PC-USB, Coax 1, Coax 2, Optical 1, Optical 2 or Bluetooth. When enabled and the input with a Fixed Volume is selected, the Volume level will immediately be set to the specified level.

Valid settings include: VARIABLE, FIXED 01-95, FIXED MAX.

- **AUX VOL:** VARIABLE (disabled) is factory default.
- **FUSB VOL:** VARIABLE (disabled) is factory default.
- **PC-USB VOL:** VARIABLE (disabled) is factory default.
- **OPT1 VOL:** VARIABLE (disabled) is factory default.
- **OPT2 VOL:** VARIABLE (disabled) is factory default.
- **COAX1 VOL:** VARIABLE (disabled) is factory default.
- **COAX2 VOL:** VARIABLE (disabled) is factory default.
- **BLUETOOTH VOL:** VARIABLE (disabled) is factory default.

---

**NOTE:** The Volume knob on the front panel and Volume +/- buttons on the IR remote are disabled when the volume is Fixed. To disable this feature set the Fixed Volume level to "Variable".

---

- **PC-USB AUDIO CLASS:** Changes supported PC-USB Audio Class of the attached device.

---

**NOTE:** Some computers attached to the PC-USB do not support USB Audio Class 2.0 and do not support 32/384 audio playback. If needed the PC-USB can be configured for USB Audio Class 1.0. Please consult your computer operating system for details.

---

- **PC-USB AUDIO MODE:** Change PC-USB Audio mode to support MQA and PCM Audio up to 24 bits or PCM Audio Only up to 32 bits. When PCM 32B is selected MQA audio is not supported. To playback MQA the MQA/24B option must be selected.

Valid settings include: MQA/24B (Default), PCM 32B.

- **NETWORK:** Shows the network connection status and to view/configure the network settings. If the network is properly configured and attached "Connected" will be displayed. To view or modify the network settings press the ENTER button.

The RC-1590MKII supports both DHCP and STATIC IP addressing. Select the desired IP address method and press ENTER.

If DHCP is selected you can refresh IP address by pressing ENTER or press MENU to view IP address information. Press the MENU button to toggle through IP address settings. If the IP address is renewed the network will be tested and connection status reported.

If STATIC IP address mode is selected you must configure all settings for the network including IP Address, Subnet Mask, Gateway and DNS Server. Use the left/right or +/- buttons to adjust the values and press ENTER to move to the next value. When the proper IP information is configured press MENU to go to the next setting. After entering the STATIC IP address information the network will be tested and connection status reported.

---

**NOTE:** For more information regarding network connection please contact your authorized Rotel dealer.

---

**NOTE:** A network connection is not required for the RC-1590MKII to operate.

---

- **MAIN:** This shows the current software version loaded into the RC-1590MKII. The software can be updated if the RC-1590MKII is properly connected to the Internet.
  - Press ENTER to check if a new software version is available.
  - If a new software version is available press the + button on the front panel or the right button on the remote control to select YES then press ENTER button to begin the software update process.
  - The new software will be downloaded from the Internet. The RC-1590MKII will power cycle when the software update is complete.

---

**NOTE:** Do NOT power off the RC-1590MKII during the software update process.

---

**NOTE:** It is recommended to Reset Factory Defaults after the software update is complete.

---

- **PC-USB:** This shows current loaded software version for PC-USB processor.
- **SIGNAL SENSE:** Check if an audio signal is present on the configured Signal Sense input. The RC-1590MKII monitors the data stream to determine if there is audio. If there is no audio detected for 10 minutes, the RC-1590MKII will enter Signal Sense Power Mode. When in Signal Sense Power Mode and the RC-1590MKII detects audio on Signal Sense input, the unit will automatically power on. To disable this function, select the OFF option which is the factory default setting.

---

**NOTE:** When the SIGNAL SENSE function is activated, the RC-1590MKII will consume additional power in signal sense standby mode.

---

**NOTE:** Due to local power consumption regulations the SIGNAL SENSE function is not available in all markets.

---

- **FACTORY DEFAULT:** This sets the unit back to the original state as when it left the factory. Press the + button on the front panel or the Right button on the remote control to select <YES> then press the ENTER button on the front panel or on the remote control.

**NOTE:** All previously configured options will be erased and reset to the factory default settings.

## Troubleshooting

Most difficulties in audio systems are the result of incorrect connections, or improper control settings. If you encounter problems, isolate the area of the difficulty, check the control settings, determine the cause of the fault and make the necessary changes. If you are unable to get sound from the RC-1590MKII, refer to the suggestions for the following conditions:

### Power Indicator Is Not Illuminated

The Power Indicator ring around the power button and the basic items in the Display window should be illuminated whenever the RC-1590MKII is plugged into the wall power outlet and the POWER switch is pushed in. If it does not light, test the power outlet with another electrical device, such as a lamp. Be sure the power outlet being used is not controlled by a switch that has been turned off.

### Fuse Replacement

If another electrical device works when plugged into the power outlet, but the Power Indicator still will not light when the RC-1590MKII is plugged into the wall outlet, it indicates that the internal power fuse may have blown. If you believe this has happened, contact your authorized Rotel dealer to get the fuse replaced.

### No Sound

Check the signal source to see if it is functioning properly. Make sure the cables from the signal source to the RC-1590MKII inputs are connected properly. Check all the wiring between the RC-1590MKII and the power amplifier, and the speakers.

## Playable Audio Format

### USB Apple (iPhone, iPod, iPad)

Format	Notes
Any supported file loaded to Apple device.	Any supported file loaded to Apple device. Phone may resample depending on stored format. May exclude Apps designed to play formats not originally supported by the sending device.

### APT-X and AAC Bluetooth

Format	Notes
Any format supported by the sending device.	May exclude Apps designed to play formats not originally supported by the sending device.

### PC-USB

Format	Notes
Format determined by the Media Player/Server software that you use.	Any supported format by the PC software PCM Audio: 44.1k, 48k, 88.2k, 96k, 176.4k, 192k, 384k (16 bit, 24 bit and 32 bit) MQA, MQA Studio (24 bit / 384k) Roon Tested

### Coax/Optical

Format	Notes
SPDIF LPCM	44.1k, 48k, 88.2k, 96k, 176.4k, 192k 16 bit, 24 bit

## Specifications

<b>Total Harmonic Distortion</b> (20 Hz - 20k Hz)	< 0.002%
<b>Intermodulation Distortion</b> (60 Hz : 7 kHz, 4:1)	< 0.002%
<b>Input Sensitivity / Impedance</b>	
Phono Input (MM)	2.5 mV / 47k ohms
Line Level Inputs (RCA)	150 mV / 100k ohms
Line Level Inputs (XLR)	250 mV / 100k ohms
<b>Input Overload</b>	
Phono Input	64 mV
Line Level Inputs (RCA)	4 V
Line Level Inputs (XLR)	5.5 V
<b>Output Level</b>	
Line Level (RCA)	1 V
Balance (XLR)	2 V
<b>Frequency Response:</b>	
Phono Input	20 Hz - 20k Hz, +0.3, - 0.2dB
Line Level Inputs (RCA)	10 Hz - 100k Hz, +0, - 0.1 dB
Line Level Inputs (XLR)	10 Hz - 100k Hz, +0, - 0.1 dB
<b>Tone Controls</b>	
Bass	±10 dB at 100Hz
Treble	±10 dB at 10kHz
<b>Signal to Noise Ratio (A weighting)</b>	
Phono Input	80 dB
Line Level Inputs (RCA)	117 dB
Line Level Inputs (XLR)	115 dB
<b>Output Level</b>	
<b>Channel Separation</b>	
Phono Input	> 85 dB
Line Level Inputs (RCA)	> 85 dB
Line Level Inputs (XLR)	> 75 dB
<b>Digital Section</b>	
<b>Frequency Response</b>	20Hz - 20kHz (±0.5 dB, Max)
<b>Signal to Noise Ratio (A weighting)</b>	108 dB
<b>Input Sensitivity / Impedance</b>	0dBFS / 75 ohms
<b>Preamplifier Output Level</b>	1.65V (at - 20dB)
<b>Digital Inputs</b>	SPDIF LPCM (up to 192kHz 24 bit)
<b>PC-USB</b>	USB Audio Class 1.0 (up to 96kHz 24 bit) USB Audio Class 2.0 (up to 384kHz 32bit)* *Driver installation required MQA and MQA Studio (up to 384kHz 24bit) Roon Tested
<b>General</b>	
<b>Power Requirements:</b>	
USA:	120 Volts, 60 Hz
EC:	230 Volts, 50 Hz
<b>Power Consumption</b>	45 watts
<b>Standby Power Consumption</b>	< 0.5 watts
<b>BTU</b>	78 BTU/h
<b>Dimensions (W x H x D)</b>	431 x 144 x 348 mm (17 x 5 <sup>11</sup> / <sub>16</sub> x 13 <sup>7</sup> / <sub>8</sub> ins)
<b>Front Panel Height</b>	3U (132.6 mm, 5 <sup>1</sup> / <sub>4</sub> ins)
<b>Weight (net)</b>	10.1 kg, 22.27 lbs.

All specifications are accurate at the time of printing.

Rotel reserves the right to make improvements without notice.

Rotel and the Rotel Hi-Fi logo are registered trademarks of The Rotel Co., Ltd, Tokyo, Japan.

# ROTEL®

## **The Rotel Co. Ltd.**

Tachikawa Bldg. 1F,  
2-11-4, Nakane, Meguro-ku,  
Tokyo, 152-0031  
Japan

## **Rotel USA**

Sumiko  
6655 Wedgwood RD N, Suite 115  
Maple Grove, MN 55311  
USA  
Phone: (510) 843-4500 (option 2)  
E-mail: [service@sumikoaudio.net](mailto:service@sumikoaudio.net)

## **Rotel Canada**

Kevro International  
902 McKay Rd. Suite 4  
Pickering, ON L1W 3X8  
Canada  
Tel: +1 905-428-2800

## **Rotel Europe**

Dale Road  
Worthing, West Sussex BN11 2BH  
England  
Phone: + 44 (0)1903 221 763  
Fax: +44 (0)1903 221 525

[www.rotel.com](http://www.rotel.com)

"Made for iPod," and "Made for iPhone," means that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone may affect wireless performance.

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

